



Stair Nose

Installation without using Versatrim Shim for floors from 7 - 9.5mm in thickness.

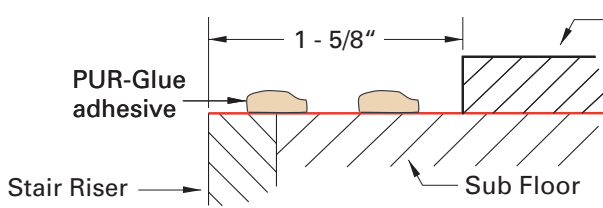


**Step 1**

Install the riser flush to the Stair! Leave 1-5/8" distance between the outer edge of the riser and the laminate floor! Put down two lines of construction adhesive!

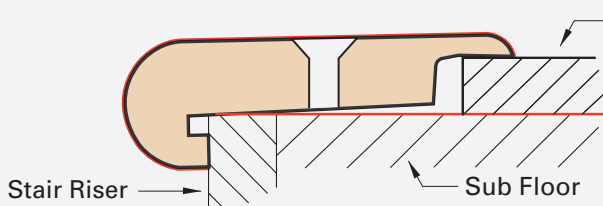

**Step 2**


Predrill and countersink the stair nose in a distance of approximately 10".

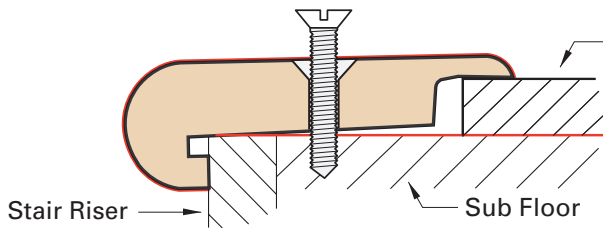

**Step 3**


Firmly screw the molding to the stair! Finish up the 1x1/8" screws with a color matching Color Fill!

Installation using Versatrim Shim for floors from 9.5 - 12.3mm in thickness.

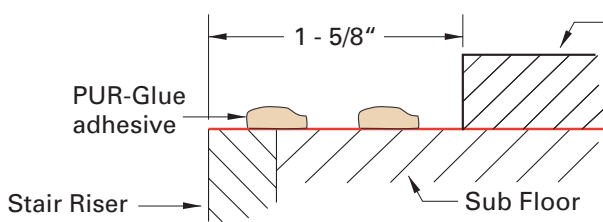


**Step 1**

Install the riser flush to the Stair! Leave 1-5/8" distance between the outer edge of the riser and the laminate floor! Put down two lines of construction adhesive!

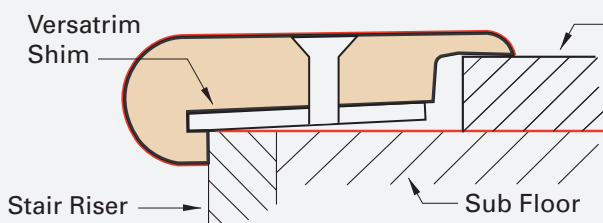

**Step 2**

Place the Versatrim Shim on the bottom of the molding and predrill and countersink the stair nose in a distance of approximately 10".

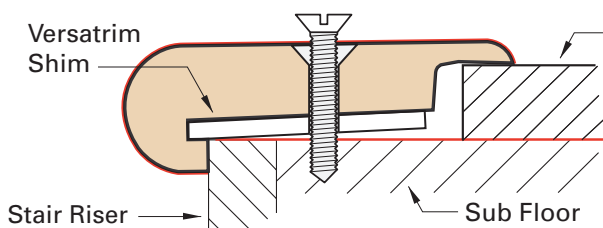

**Step 3**

Firmly screw the molding to the stair! Finish up the 1x1/8" screws with a color matching Color Fill!