



T-Molding

Use the black Thin-Track for 7 - 9.5 mm floors

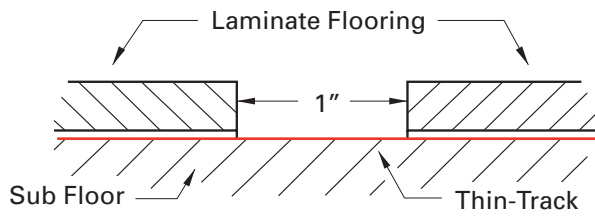


Step 1

Install the flooring planks including the underlayment by leaving a 1" inch (25mm) gap for the installation of the T-molding.

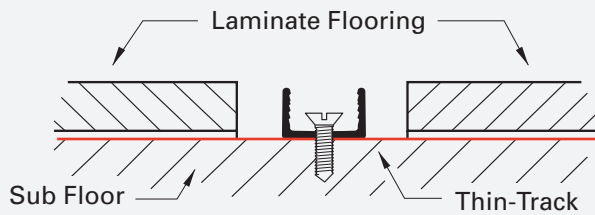

Step 2

Center the U-Track between the two laminate floors and screw it to the sub floor by using 4x1/2" screws.

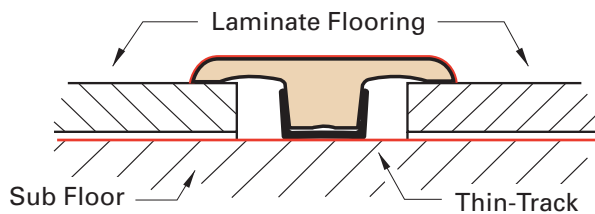


Step 3

Gently press the molding into the track starting from one end to the other just like you would close a Zip-Lock bag.


!!! Do not try to push the entire molding in all at once by just pressing it in from top !!!

Use the white Thick-Track for 9.5 - 12.3 mm floors.
Use the same molding, it is just a different track.

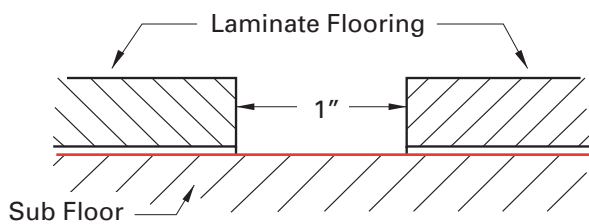


Step 1

Install the flooring planks including the underlayment by leaving a 1" inch (25mm) gap for the installation of the T-molding.

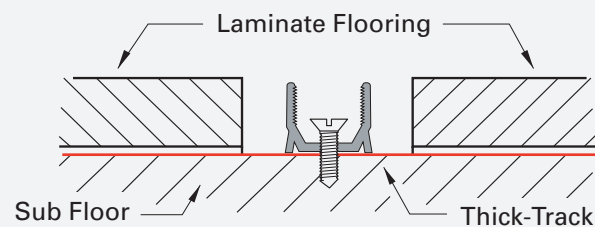

Step 2

Center the U-Track between the two laminate floors and screw it to the sub floor by using 4x1/2" screws.

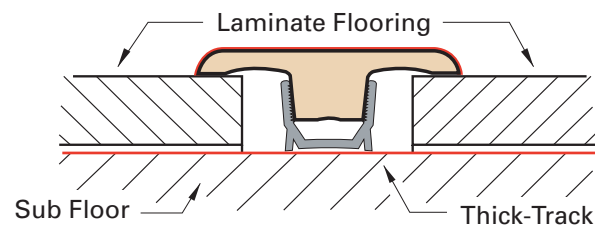

Step 3

Gently press the molding into the track starting from one end to the other just like you would close a Zip-Lock bag.

!!! Do not try to push the entire molding in all at once by just pressing it in from top !!!