


Wall Base Molding and Quarter Round


Leave a gap between the wall and the floor as suggested by the manufacturer of the floor, but no more than 1/2" to allow the molding to sit on the floor!

Step 1

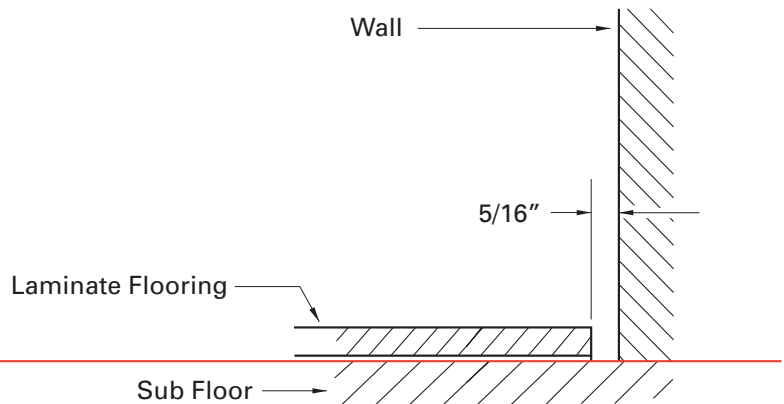


Apply two beads of adhesive on the back side of the molding as shown in the picture and then gently press against the wall and support it with something heavy until it has cured so that it will not pop off the wall.

Step 2

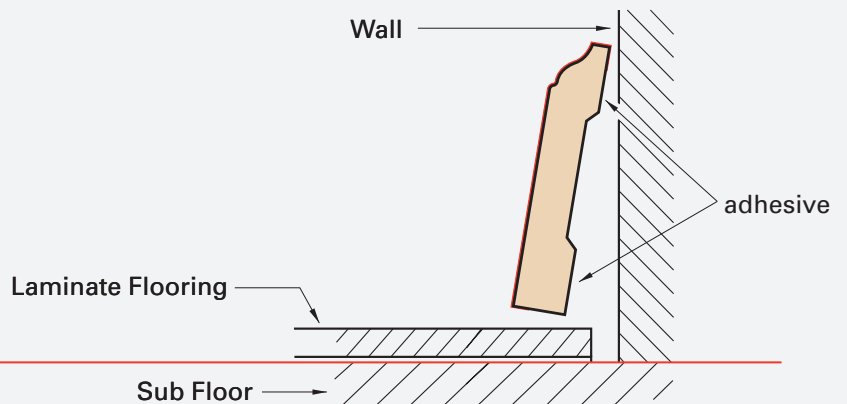

Apply one thin bead of adhesive to the back of the Quarter Round and attach it to the Wall Base Molding and support it with a heavy object until the adhesive has cured so it won't pop off the Wall Base Molding.

Step 3

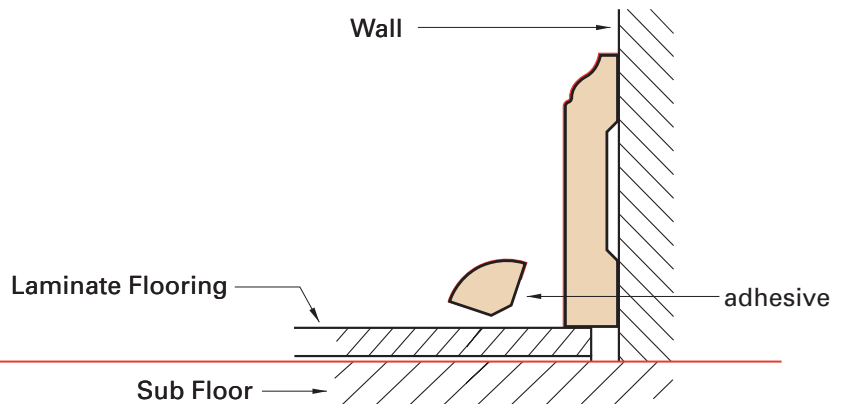

Optional Step: Use finish nails in the Wall Base Molding every 16" and also through the Quarter Round and into the Wall Base Molding. Be sure to pre-drill all holes. Finish up the nails with a color matching Color Fill!

Step 4

